


Tyre Inflator

DC 12 Volt

Please read these instructions carefully and follow all safety rules and operating instructions. Keep this manual for future reference.

General Safety Rules

- Before using this product please check the lighter or power socket to be used is a 12 volt DC outlet.
- Ensure there is no rust or any other residue in the socket as this may prevent a good electrical contact and could result in the power supply lead overheating and cause damage.
- Please check the recommended air pressure of the vehicle tyres and carefully watch the pressure gauge while inflating to avoid over-inflation.
- You should start the engine when using the air compressor to ensure battery capacity is maintained and the pump works normally.
- Be careful when touching the air hose while in use or just after use as this may become hot.
- After 10 minutes of continuous use, switch off the inflator for 20 minutes to allow the unit to cool down.
- After use, replace the air hose back into its storage slot and rewind the power cord back on to its storage holder, locating the 12 volt plug back into its housing.
- Use only 12 volt direct current power sockets. Do not use this product with any other type of power source.
- Do not tangle or pull the power cord as this may cause internal damage, preventing the compressor from working.
- If the unit emits an unusual noise please stop and immediately check for the cause of the problem.
- Keep children away from the compressor while it is in use.
- Avoid dropping the product or causing it severe impacts.
- Do not over expose the unit to direct sunlight.
- Do not use in damp areas or around flammable materials.
- Do not attempt to make any modifications or attempt to use the compressor for an application for which it is not intended. Repairs if necessary should be carried out by a suitable qualified person.

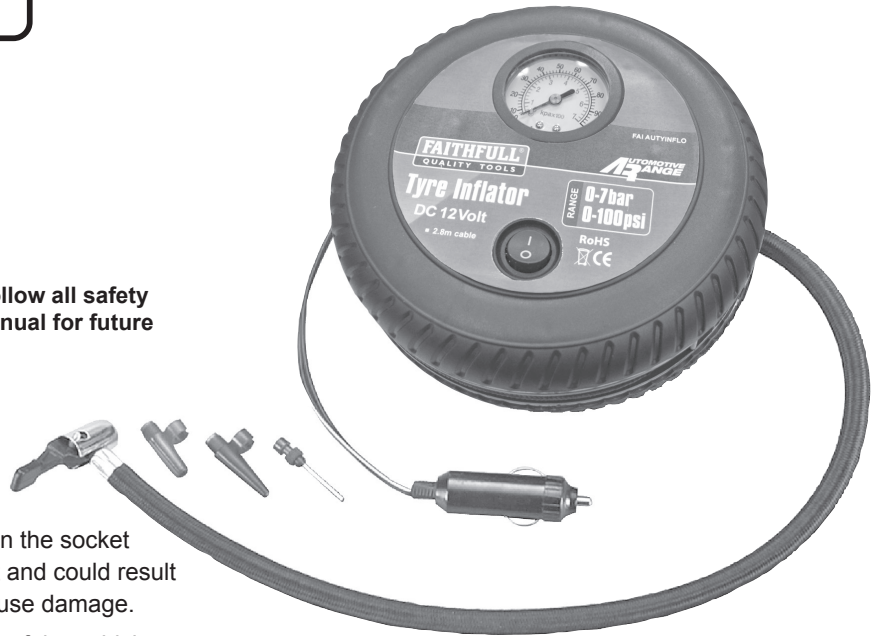

USING THE AIR COMPRESSOR

1. Remove the 12 volt plug from its storage slot and unwind the power cord from its housing.
2. Attach the air nozzle to the tyre valve and press the thumb lock down to secure it.
3. Start the vehicle's engine.
4. Plug the 12 volt plug into the cigarette lighter or power outlet socket.
5. Press the power switch to ON to start the air compressor. Carefully observe the air pressure using the pressure gauge and press the power switch to OFF once the desired PSI/BAR pressure is reached.
6. Lift the thumb lock up and release the air hose from the tyre valve taking care it isn't hot. Remove the 12 volt plug from the power outlet socket.
7. Turn off the car engine.
8. Place the air hose back into its storage slot.
9. Rewind the power cable on to its storage holder and locate the 12 volt adaptor back into its housing.

CAUTION

Always check and inflate tyres when cold, never just after driving your vehicle as the heat in the tyres will give a false higher reading.

The gauge is for indication purposes only. It is recommended you check your tyre pressures with a calibrated gauge to ensure that they are at the correct pressure.

Specifications

Power: 12 volts DC

Pressure gauge: 0 - 100psi
0 - 7bar

Power cable 2.8 metres

Adaptor fitting: Car cigarette lighter plug

Air nozzle type: Schrader valve



FAITHFULL TOOLS

Phoenix House, 3 White Lodge Business Estate,
Hall Road, Norwich, Norfolk, NR4 6DG, United Kingdom

E-mail: enquiries@faithfulltools.com