

Alarm Padlock

Ideal to secure: sheds, garages, motorcycles, bicycles, trailers, lawn mowers, tool boxes, side gates, garden furniture etc. The alarm is activated if the lock is moved, touched or knocked. Auto reset and anti-muffle design.



Specifications

Shackle size

Diameter 10mm, clearance 42mm Body size Width 70mm, height 60mm, depth 33mm

This alarm requires 6 x A76 / LR44 1.5V cells (included) Make sure you insert the batteries with the correct polarity. Batteries should last for over 2,000 ten second alarms.

FAITHFULL TOOLS

Phoenix House, 3 White Lodge Business Estate, Hall Road, Norwich, Norfolk, NR4 6DG, United Kingdom E-mail: enquiries@faithfulltools.com



Instructions

This padlock can be used alarmed or unalarmed as a normal padlock.



Arming and Disarming

Unlock your padlock and remove the shackle. There is a deep groove on the inside edge on one side of the shackle. When fitted with the groove on the key port side of the lock the alarm is active, as you insert the shackle the unit will beep.

If fitted the other way round the alarm system is inactive and will not make a noise.

Disable the alarm when using on moving vehicles. Change the shackle position to set the alarm when the vehicle is stationary.

Battery Replacement

To replace the batteries, remove the shackle and undo the two screws at the bottom of the shackle holes. Pull the padlock apart, carefully open the battery cover and replace the batteries.

Operation

Insert the key and turn clockwise to release the shackle and re-fit the shackle with the groove near the key port. The lock will beep to indicate that the alarm is active.

The padlock will be armed after 30 seconds. Turn the key anti-clockwise to lock the unit.

The first time the alarm is triggered the unit will provide a triple beep warning. This allows you to unlock it without setting off the alarm. The next trigger will cause an alarm.

The two tone 120db siren will sound for 10 seconds when triggered and will sound again if triggered again. After 35 seconds without a trigger the padlock will reset so that a further trigger will give the triple beep warning before alarming.