



# Folding AXLE STANDS

FAI AUAXLE2

## USER INSTRUCTIONS



### INTRODUCTION

It is important to read and fully understand the operating instructions supplied with this product and any labels attached to the axle stand. Learn its applications and understand its limitations and the potential hazards associated with using this tool. It is the user's responsibility to ensure this product is operated in accordance with these instructions and that all safety precautions are observed before use.

**Store this manual in a safe place for future reference.**

## SPECIFICATIONS

Specifications are subject to change without notice.

Model	Capacity	Min. Height	Max. Height	Base Dimension
FAI AUAXLE2	2,000kg (2 tonnes)	277mm (7 <sup>7</sup> / <sub>8</sub> in)	365mm (14 <sup>1</sup> / <sub>2</sub> in)	250 x 250mm (10 x 10in)

## IMPORTANT SAFETY INFORMATION

Read these safety warnings before operation.

### WARNING!


- Failure to observe these warnings may result in loss of load, damage to axle stands, and/or axle stand failure resulting in personal injury or property damage.
- Ensure axle stands are in good condition. **DO NOT** use if damaged.
- Ensure you familiarize yourself with the product and its folding mechanism.
- Ensure the locking pin is in place before use.
- Vehicles with automatic gear boxes must have the gear lever in the 'Parked' position
- When raising the stands centre column to engage load, ensure the dead centre of the stands saddle is located under the vehicles jacking point.
- **DANGER!** Great care must be taken to ensure you lower the vehicle load slowly and carefully onto the stands.
- **DO NOT** use on soft ground or tarmac. Use only on concrete.
- **DO NOT** use a single stand. Only use in pairs.
- **DO NOT** overload axle stands beyond rated capacity.
- **DO NOT** use four stands on one vehicle.
- **DO NOT** jack up the end of vehicle if the other end is already on stands.
- **DO NOT** use on three wheeled vehicles or trailers. Refer to makers instructions.
- **DO NOT** use stands if they are damaged or parts are missing.

## BEFORE USE

Check that the stands are in good order and condition and that no damage has been sustained during transit.

Familiarise yourself with the folding mechanism and the folding legs. Insert the centre column in the centre tube, adjust to height required and insert the locking pin.

When lowering the centre column, hold the centre column firmly before removing the pin. Failure to do so will allow the centre column to free fall through the centre which may be dangerous.

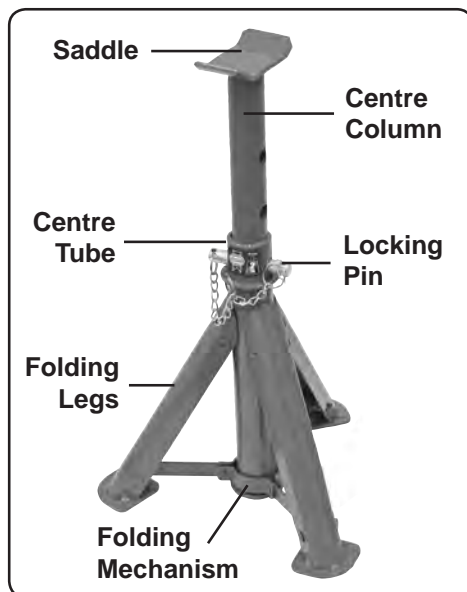

## OPERATION

1. Ensure the maximum load does not exceed rated capacity.
2. Refer to vehicle owners hand book for correct jacking procedure. Check to ensure that manufacturers recommended jacking points are in good condition.
3. Ensure the vehicles brakes are on and wheels are chocked. Vehicles with automatic gear boxes must have the gear lever in the 'Parked' position.
4. Ensure the stand legs are fully extended and adjust the height of the stand to correspond with the raised vehicle.
5. Check that the locking pin is correctly pushed all the way through the centre column and out of the other side, then position stand under vehicle at the points specified by vehicle manufacturer.
6. Carefully and slowly lower the load onto the stand. Ensure the load bearing points sit in the centre of the stand saddle and check that the stands are stable and not leaning.
7. After use, hold the centre column firmly when removing the locking pin. Failure to do so will allow the centre column to fall freely through the main centre tube which could be dangerous.

**WARNING!** Ensure you follow all instructions carefully. **DO NOT** load off centre of stands. Failure to observe these warnings may cause damage or serious injury.

## MAINTENANCE & INSPECTION

1. Visual inspection should be made before each use of the stands, checking for cracks, cracked welds and missing and/or damaged parts. Any stand that appears to be damaged in any way must be removed from service immediately.
2. BECAUSE OF THE POTENTIAL HAZARDS ASSOCIATED WITH THE MISUSE OF EQUIPMENT OF THIS TYPE, NO MODIFICATIONS SHOULD BE MADE TO THE PRODUCT.

## OTHER PRODUCTS AVAILABLE IN THIS RANGE:

<b>FAI AUJACBOT2</b>	<b>Bottle Jack</b>	<b>2 Ton - 2000kg</b>
<b>FAI AUJACBOT4</b>	<b>Bottle Jack</b>	<b>4 Ton - 4000kg</b>
<b>FAI AUJACBOT6</b>	<b>Bottle Jack</b>	<b>6 Ton - 6000kg</b>
<b>FAI AUJACTRO2</b>	<b>Trolley Jack</b>	<b>2 Ton - 2000kg</b>
<b>FAI AUJACTRO3</b>	<b>Trolley Jack</b>	<b>2.5 Ton - 2500kg</b>
<b>FAI AUAXLE2</b>	<b>Axle Stands (2) Folding</b>	<b>2 Ton - 2000kg</b>
<b>FAI AUAXLE3</b>	<b>Axle Stands (2) Heavy-Duty</b>	<b>3 Ton - 3000kg</b>
<b>FAI AUAXLE6</b>	<b>Axle Stands (2) Heavy-Duty</b>	<b>6 Ton - 6000kg</b>
<b>FAI AUCREEP</b>	<b>Folding Car Creeper</b>	
<b>FAI AUSEAT</b>	<b>Steel Seat on Wheels</b>	

---

**IMPORTANT: NO LIABILITY IS ACCEPTED FOR PERSONAL INJURY OR DAMAGE TO A VEHICLE OR PROPERTY CAUSED BY THE INCORRECT LOCATION OR USE OF THE JACK.**

No portion of this manual or artwork may be reproduced in any for without the written consent of Faithfull Tools.