



500W AND 1000W TELESCOPIC FLOODLIGHT FPP SL500CT/SL500CTL & FPP SL1000CT/SL1000CTL

IMPORTANT SAFETY INSTRUCTIONS

Carefully read and understand all instructions before attempting to assemble or operate this fixture.

GENERAL SAFETY INFORMATION

1. Make sure power conforms to lamp requirements.
2. Make sure bulb used is the correct wattage. Using bulb of higher than rated wattage can increase risk of fire.
3. Replace or repair damaged cords immediately.
4. Replace or repair damaged or missing lenses and guards immediately.
5. Refer all servicing of electrical parts to a qualified electrician.
6. Protect power cords from coming in contact with sharp objects, chemicals, or hot surfaces.
7. To avoid electrical shock, do not operate unit around standing water.

CAUTION

1. Bulb and fixture become extremely hot during use. Keep away from flammable objects and handle with care. Always unplug the light and let it cool 5 minutes before attempting to touch the fixture.
2. Do not remove guard or lens when the lamp is on. Turn fixtures off and allow to cool before servicing. Do not attempt to operate without safety wire guard.
3. Do not direct light at persons or look directly at lighted bulb.
4. Use only 3 wire extension cords that have a 3 prong grounding type plug, and a 3-pole receptacle that accepts the equipment plug.
5. Tripod legs should be secured with sandbags or other suitable ballast
 - a) When used on uneven or rocky surfaces.
 - b) When used in windy areas.
 - c) Anytime stand is extended beyond normal maximum position.

FITTING TUNGSTEN HALOGEN LAMP

Undo top centre screw of main fitting assembly to release front cover. Unpack the Tungsten Halogen Lamp. Make sure protective wrapping remains in place whilst handling. This is to ensure finger contact is not made with the lamp glass, as this will cause the lamp to malfunction. Carefully take hold of the lamp making sure protective wrapping is still in place. Place one end of lamp into one side of lamp holder, pushing lightly to one side of lamp holder. Make sure both ends of the lamp are making correct contact with lamp holders, remove protective wrapping and refit front cover making sure glass seal is in place.

DO NOT ATTEMPT TO REPLACE A FAULTY OR BURNT OUT LAMP WHILST FITTING IS HOT.

REPLACEMENT TUBE	240V	FPP SLT500W2
	110V	FPP SLT500W2L
CLASS C	240V	FPP SLT500WC
CLASS C	110V	FPP SLT500WCL

IMPORTANT

WHEN IN OPERATION THIS FITTING IS EXTREMELY HOT. DO NOT TOUCH THE FITTING ITSELF UNTIL IT HAS COOLED DOWN. DO NOT FULLY IMMERSE THIS FITTING IN WATER.

ASSEMBLY INSTRUCTIONS

1. FPP SL1000CT and SL1000CTL only- Mount two lamp heads to crossbar with bolts, washers and attachment nuts. Make sure washer is between U-bracket of head and the bar to allow free head adjustment. Do not over-tighten nuts.
2. FPP SL1000CT and SL1000CTL only - Mount crossbar with heads to top pole of tripod with attachment screw and washer. Do not over-tighten.
FPP SL500CT and SL500CTL only - Mount lamp head to top pole of tripod stand with attachment screw.
3. Install the bulb.
4. Plug into outlet and test.

NOTE

If the fixture does not function when you turn on power, unplug fixture and check the bulb. Make sure it is properly seated in sockets.

OPERATING INSTRUCTIONS

1. Raise three legs into position by pushing down on leg locks and lifting legs, one at a time into position. Place on ground in standing position.
2. To adjust pole height. Loosen the appropriate lock while supporting post with other hand, then raise or lower post to desired height.

