

# Folding Saw Horse Galvanised Trestle

## Assembly Instructions



Tools required for assembly:  
Pozi-drive screwdriver.  
6mm & 8mm spanner.

Section A shows the correct thread combination.

The M8 x 16mm nylon insert bolt joins the serrated angled profiles together through the round hole

The M6 x 12mm bolt secures through the elongated slot and acts as a leg brace stop.


1	M6 x 12		11 x
2	M6		6 x
3	M6		3 x
4	M8 <i>nylon insert</i>		3 x
5	M8		6 x
6	M8 x 16		3 x
7	M6 x 35		2 x
8	M6		10 x

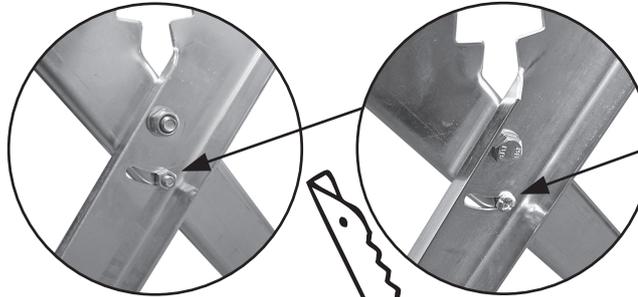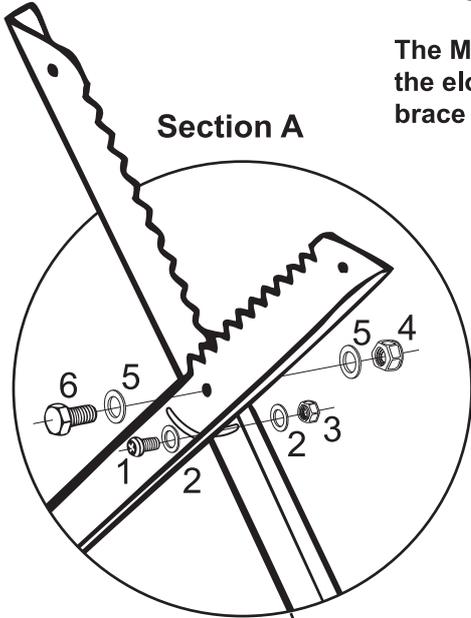

### Sliding Lock Bolt

**NB.** These bolts must be fitted to ensure the saw horse is correctly assembled.

This saw horse must only be used with the legs splayed fully and the jaws set to their widest (26cm 10in) and the sliding lock bolt tightened.

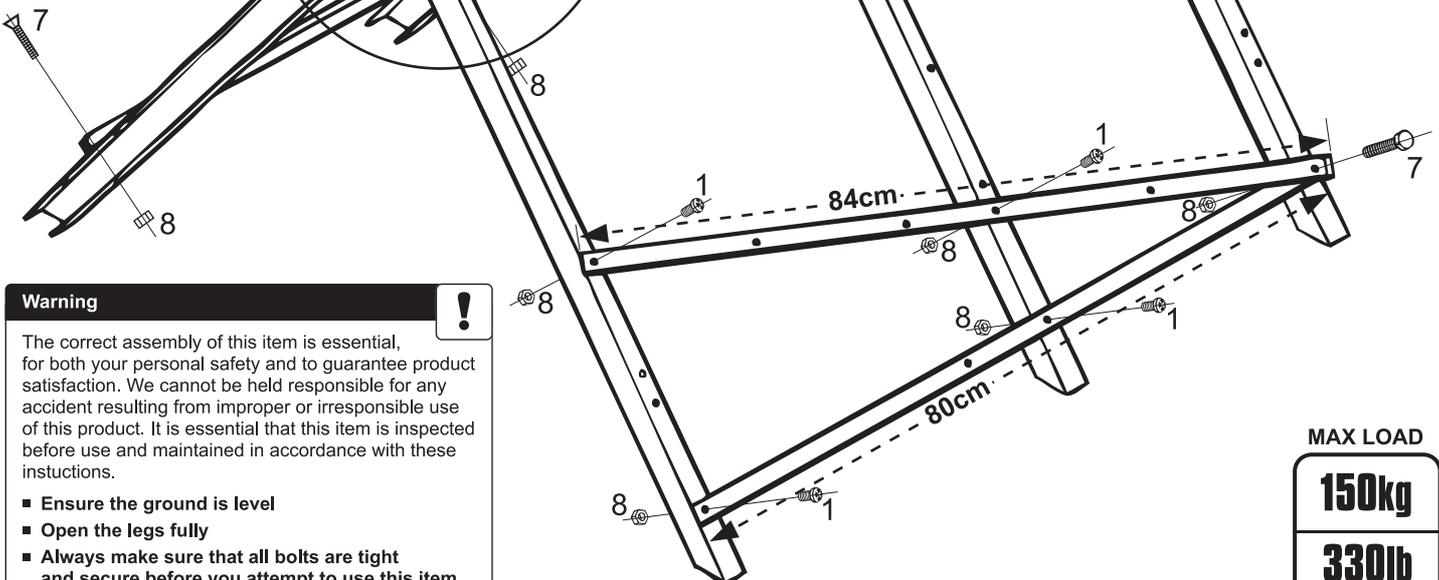

### Warning

The correct assembly of this item is essential, for both your personal safety and to guarantee product satisfaction. We cannot be held responsible for any accident resulting from improper or irresponsible use of this product. It is essential that this item is inspected before use and maintained in accordance with these instructions.

- Ensure the ground is level
- Open the legs fully
- Always make sure that all bolts are tight and secure before you attempt to use this item.

**FAITHFULL TOOLS**  
Phoenix House,  
3 White Lodge Business Estate,  
Hall Road, Norwich, Norfolk,  
NR4 6DG, United Kingdom  
E-mail: enquiries@faithfulltools.com

[www.fairfulltools.com](http://www.fairfulltools.com)



ALWAYS WEAR  
SUITABLE PROTECTION

MAX LOAD

**150kg**

**330lb**