



FAI SAWHORSE

Assembly Instructions


Tools required for assembly:
 Pozi-drive screwdriver.
 6mm & 8mm spanner.

Section A shows the correct thread combination.

The M8 x 16mm nylon insert bolt joins the serrated angled profiles together through the round hole

The M6 x 12mm bolt secures through the elongated slot and acts as a leg brace stop.

Pos.1	M6 x 12		11 x
Pos.2	M6		6 x
Pos.3	M6		3 x
Pos.4	M8 nylon insert		3 x
Pos.5	M8		6 x
Pos.6	M8 x 16		3 x
Pos.7	M6 x 35		2 x
Pos.8	M6		10 x

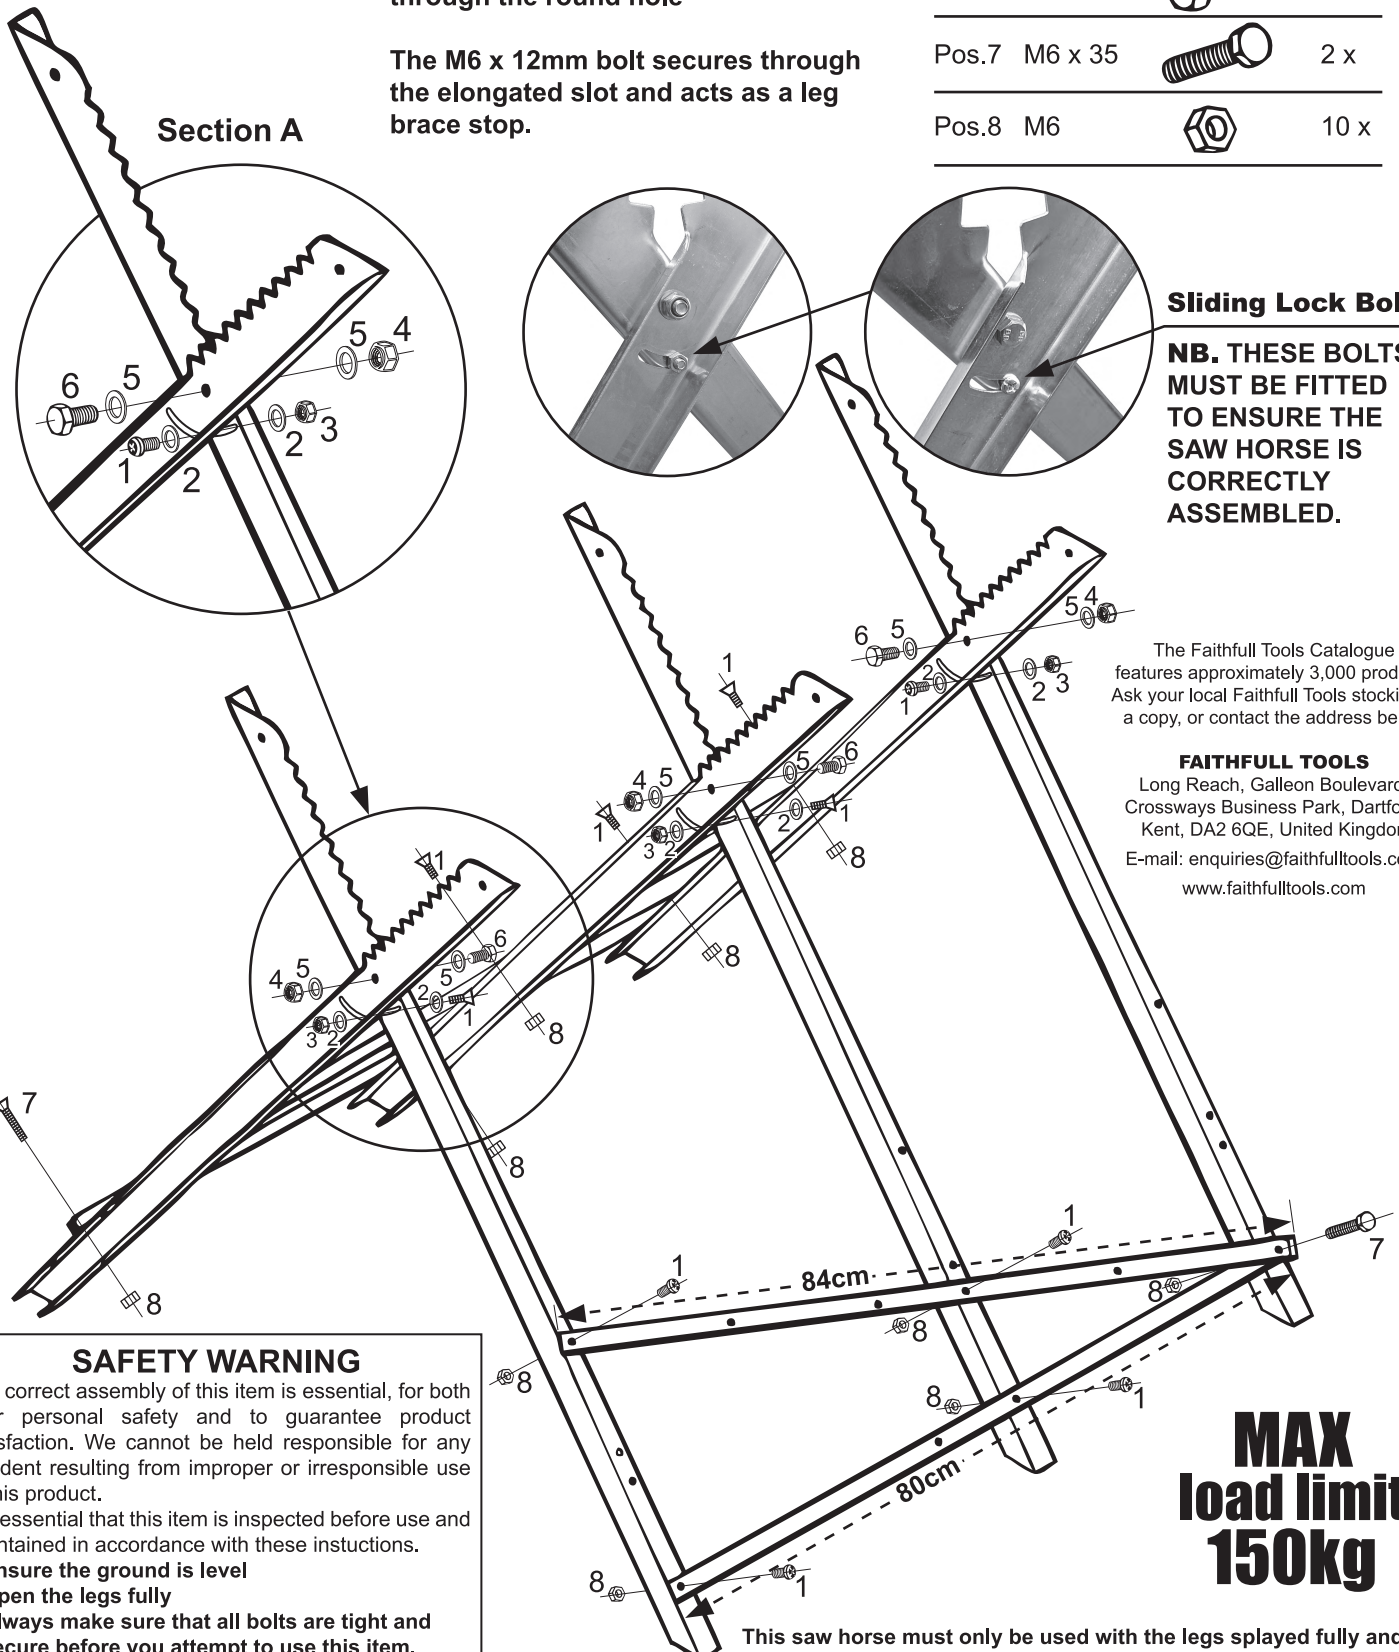

Sliding Lock Bolt

NB. THESE BOLTS MUST BE FITTED TO ENSURE THE SAW HORSE IS CORRECTLY ASSEMBLED.

The Faithfull Tools Catalogue features approximately 3,000 products. Ask your local Faithfull Tools stockist for a copy, or contact the address below.

FAITHFULL TOOLS
 Long Reach, Galleon Boulevard,
 Crossways Business Park, Dartford,
 Kent, DA2 6QE, United Kingdom
 E-mail: enquiries@faithfulltools.com
 www.faithfulltools.com

SAFETY WARNING

The correct assembly of this item is essential, for both your personal safety and to guarantee product satisfaction. We cannot be held responsible for any accident resulting from improper or irresponsible use of this product.

It is essential that this item is inspected before use and maintained in accordance with these instructions.

- Ensure the ground is level
- Open the legs fully
- Always make sure that all bolts are tight and secure before you attempt to use this item.

**MAX
 load limit
 150kg**

This saw horse must only be used with the legs splayed fully and the jaws set to their widest (26cm 10in) and the sliding lock bolt tightened.