


Axe & Hatchet Handles

A fawn foot pattern axe handle made from the finest hickory timber. Faithfull replacement wooden handles are made to BS3823.

	LENGTH	TYPE	Ex VAT	Inc VAT
FAIHA12	300mm	12in Hatchet	£6.41	£7.69
FAIHA14	350mm	14in Hatchet	£6.69	£8.03
FAIHA16	400mm	16in Hatchet	£7.16	£8.59
FAIHA24	600mm	24in Hatchet	£15.82	£18.98

FAIHA30212	765 x 64mm	30 x 2 ¹ / ₂ in Axe	£16.08	£19.30
FAIHA36212	915 x 58.5mm	36 x 2 ⁵ / ₁₆ in Axe	£16.08	£19.30
FAIHA36234	915 x 68mm	36 x 2 ³ / ₄ in Axe	£16.39	£19.67
FAIHA363	915 x 76mm	36 x 3in Axe	£18.35	£22.02
FAIHA36312	915 x 92mm	36 x 3 ⁵ / ₈ in Axe	£20.63	£24.76

HICKORY

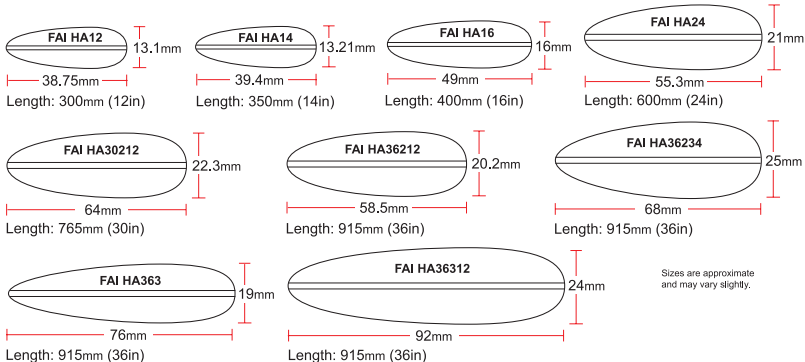

CAUTION
Replacing a damaged or broken handle on a striking tool should be done with great care. Axe handles must always be fitted with the correct size wooden and steel wedges.

Axe Handle Replacement

Cut off the old handle close to the head (see Fig 1). Do not burn the old handle out in a fire as the heat may weaken the steel of the axe head. Knock out the remaining handle stub using a large punch or an old chisel (see Fig 2).

Push the new handle into the head as far as you can then, with the axe upside down, tap the end of the handle until the head is seated against the shoulder of the handle (see Fig 3a/b).

Trim off any excess handle that protrudes through the eye (see Fig 4) then drive a timber wedge into the slot in the handle as far as it can go, trimming off the excess (see Fig 5).

Lastly, drive in the small metal ring wedge at right angles to the timber wedge (see Fig 5) to secure the head.

Fig 1. Cut off the old handle.

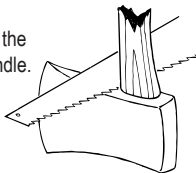


Fig 2. Knock out the handle stub.

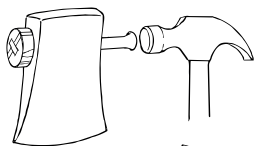


Fig 3a. Push new handle into head.

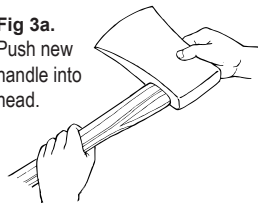


Fig 3b. Tap the new handle into the head.

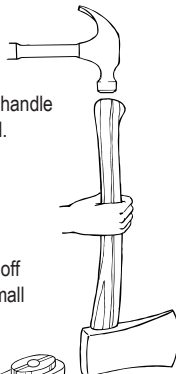


Fig 4. Trim off any excess.

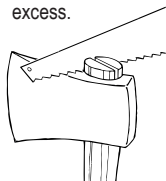


Fig 5. Fit it timber wedge and trim off the excess. Then drive in small metal wedge.

